



ROGER TECHNOLOGY REMOTE CONTROL PROGRAMMING

The Roger Technology E80/TX52R transmitter will copy a code from any existing fixed code 433.92mhz Transmitter.

Step 1: Take the new transmitter that you wish to programme and press the two buttons simultaneously until the red LED stays on permanently (the LED flashes initially and then stays on).



Step 2: Now release the button you **don't** want to program and the LED starts flashing slowly for a few seconds.

Step 3: After a few seconds the LED will start flashing faster and the transmitter is now in 'Learn Mode'. Take an existing transmitter that **currently operates your gate/door**, and position it against the front of the new transmitter as illustrated in the image below. Press the channel button on the existing transmitter that you want to copy. The LED on the new transmitter should stay on for 1 second and then go out to confirm the code has been successfully copied, the new transmitter is now ready for use.



To programme the other channel repeat steps 1 to 3 above.